


SOLARCON

**GPK-1**

Groundplane kit for A-99

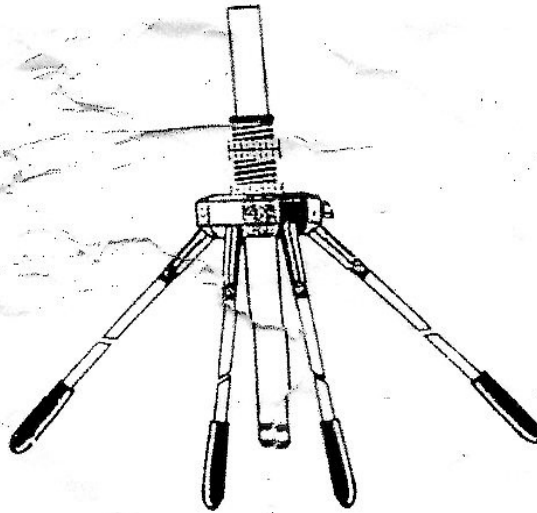

### Installation Instructions

**NOTE:** Radials must be 9 feet above or away from any existing structure for maximum performance.

1. Insert aluminum bottom tube into ground plane collar and raise collar to the base of plastic threaded section.
2. Tighten the set screw.
3. Install the four fiberglass radials.
4. Install the A-99.

DO NOT STRIP THREADS